


XRC Pro Transmitter

Visual Connections Schematic.
(MR.AHSAN)

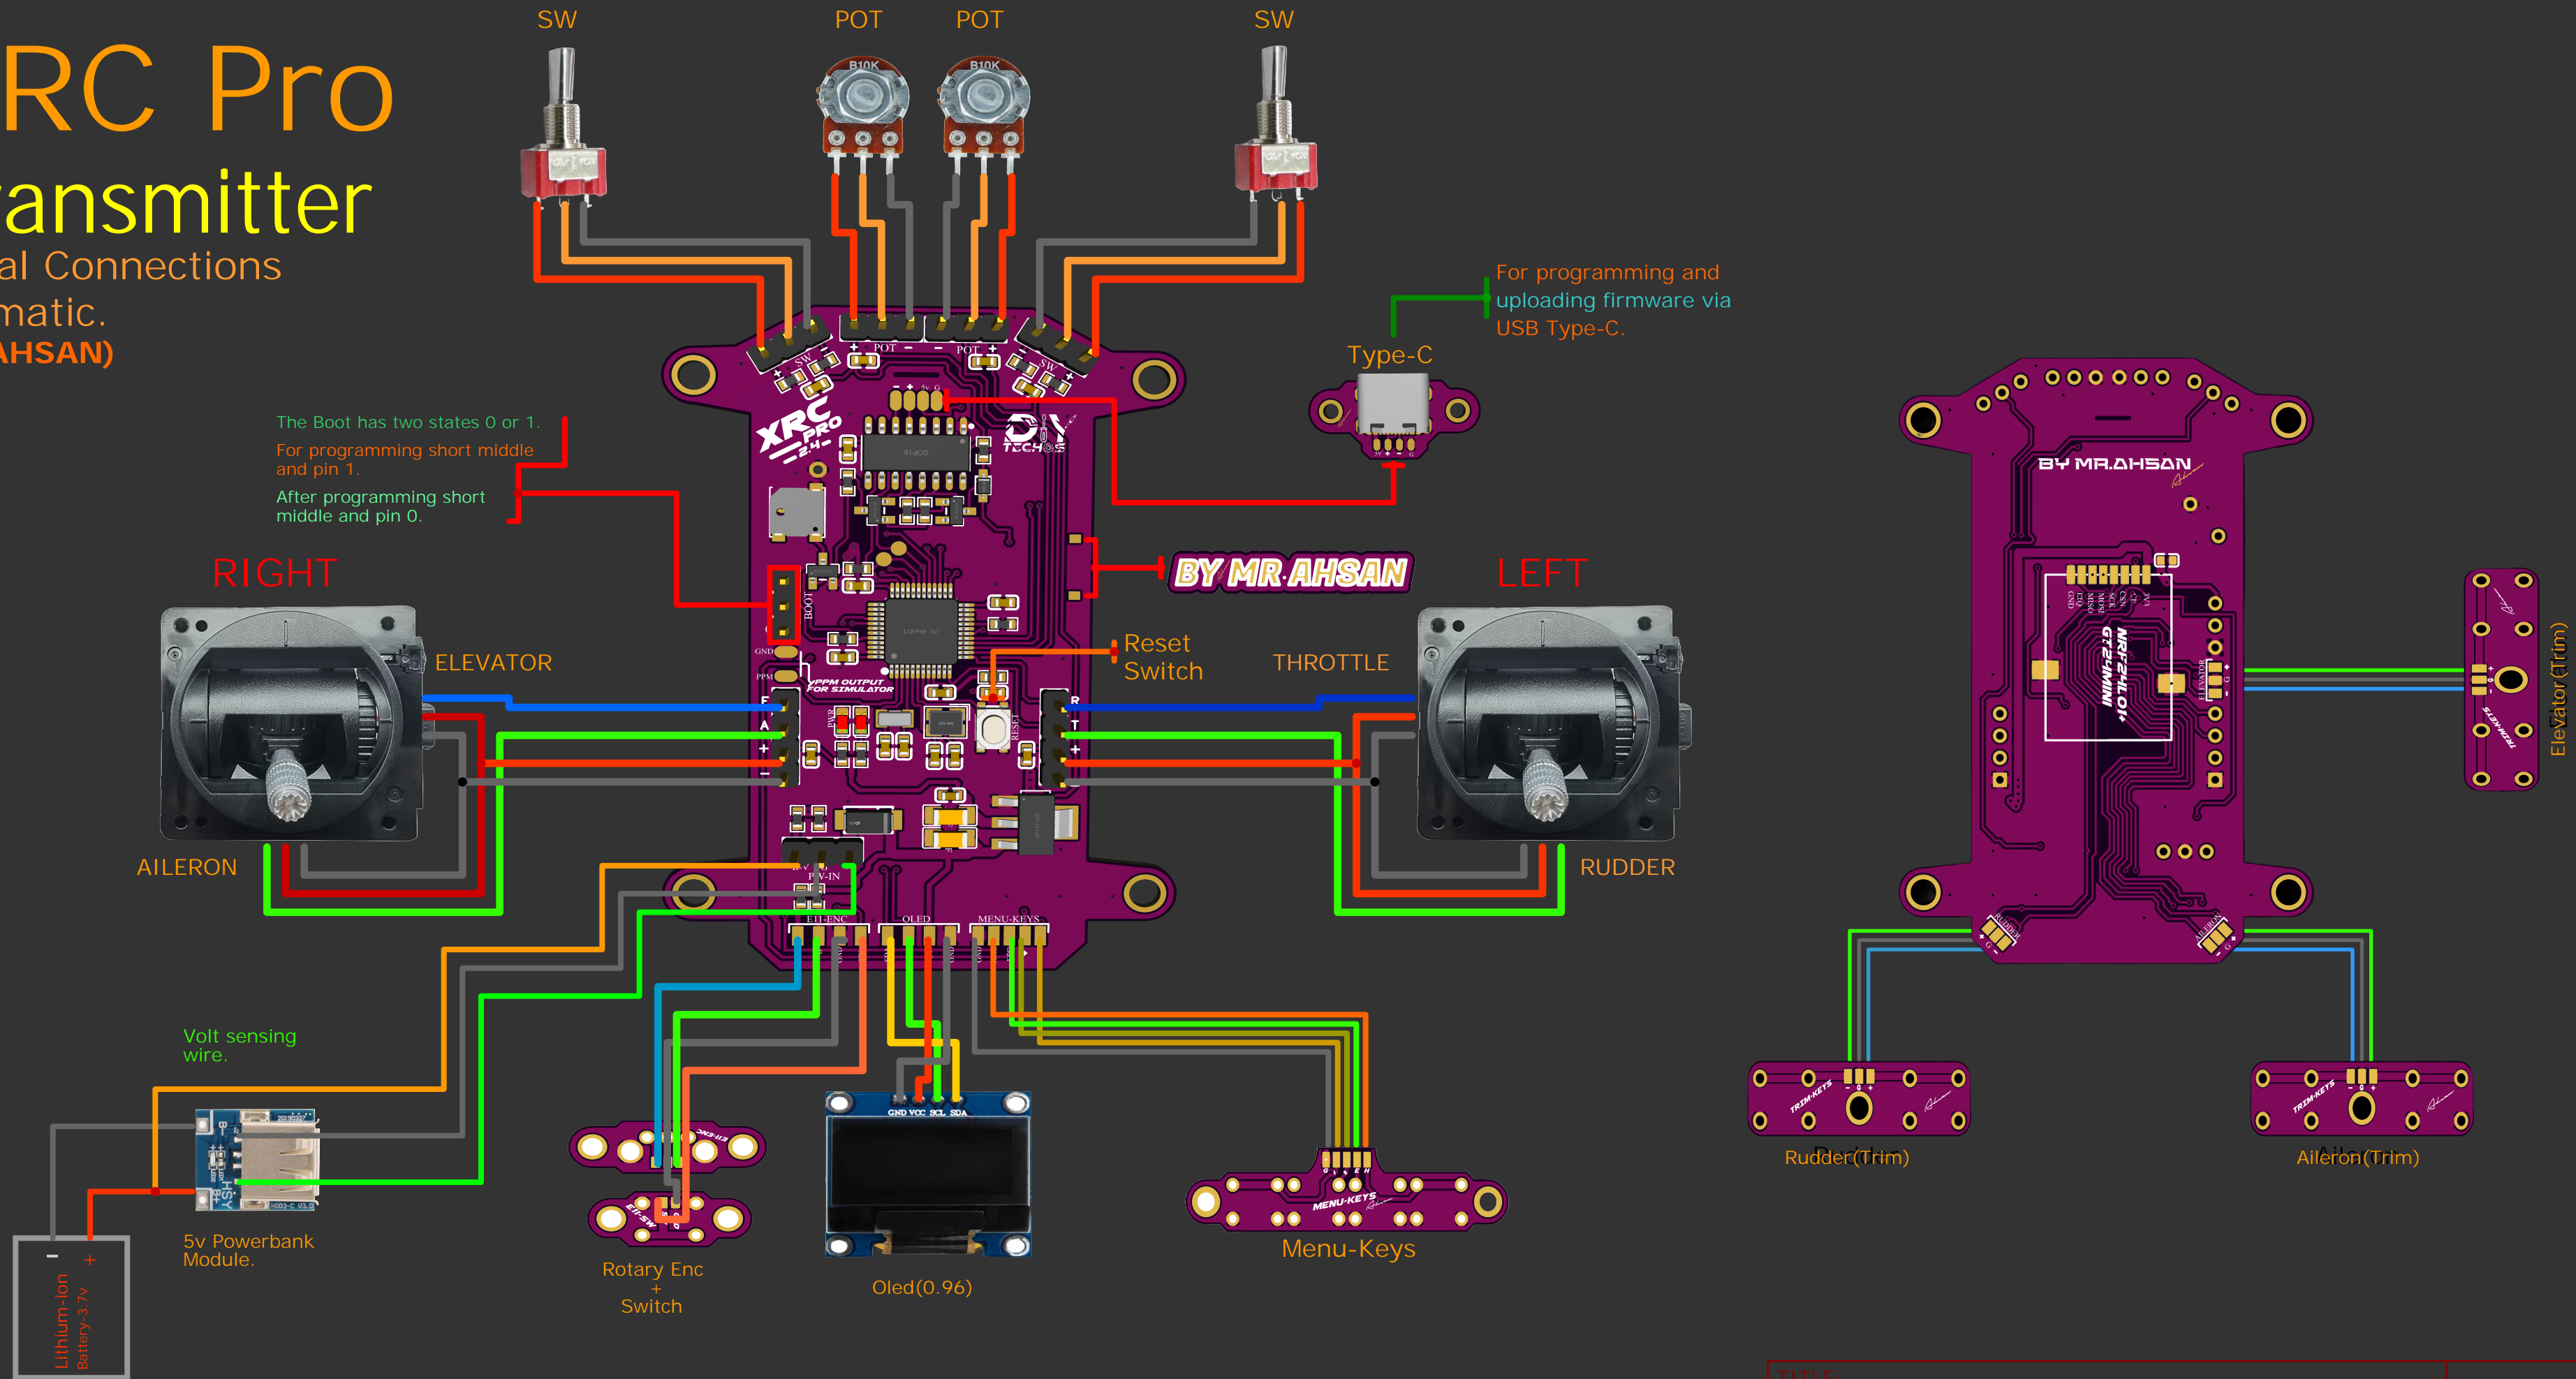

The Boot has two states 0 or 1.
For programming short middle and pin 1.
After programming short middle and pin 0.

For programming and uploading firmware via USB Type-C.


TITLE: Transmitter Connections		REV: 1.0
Company: DIY TECHOS		Sheet: 1/1
Date: 2024-10-10	Drawn By: BY MR.AHSAN	

XRC Pro

Receiver

PWM & PPM

Visual Connections
Schematic.
(MR.AHSAN)

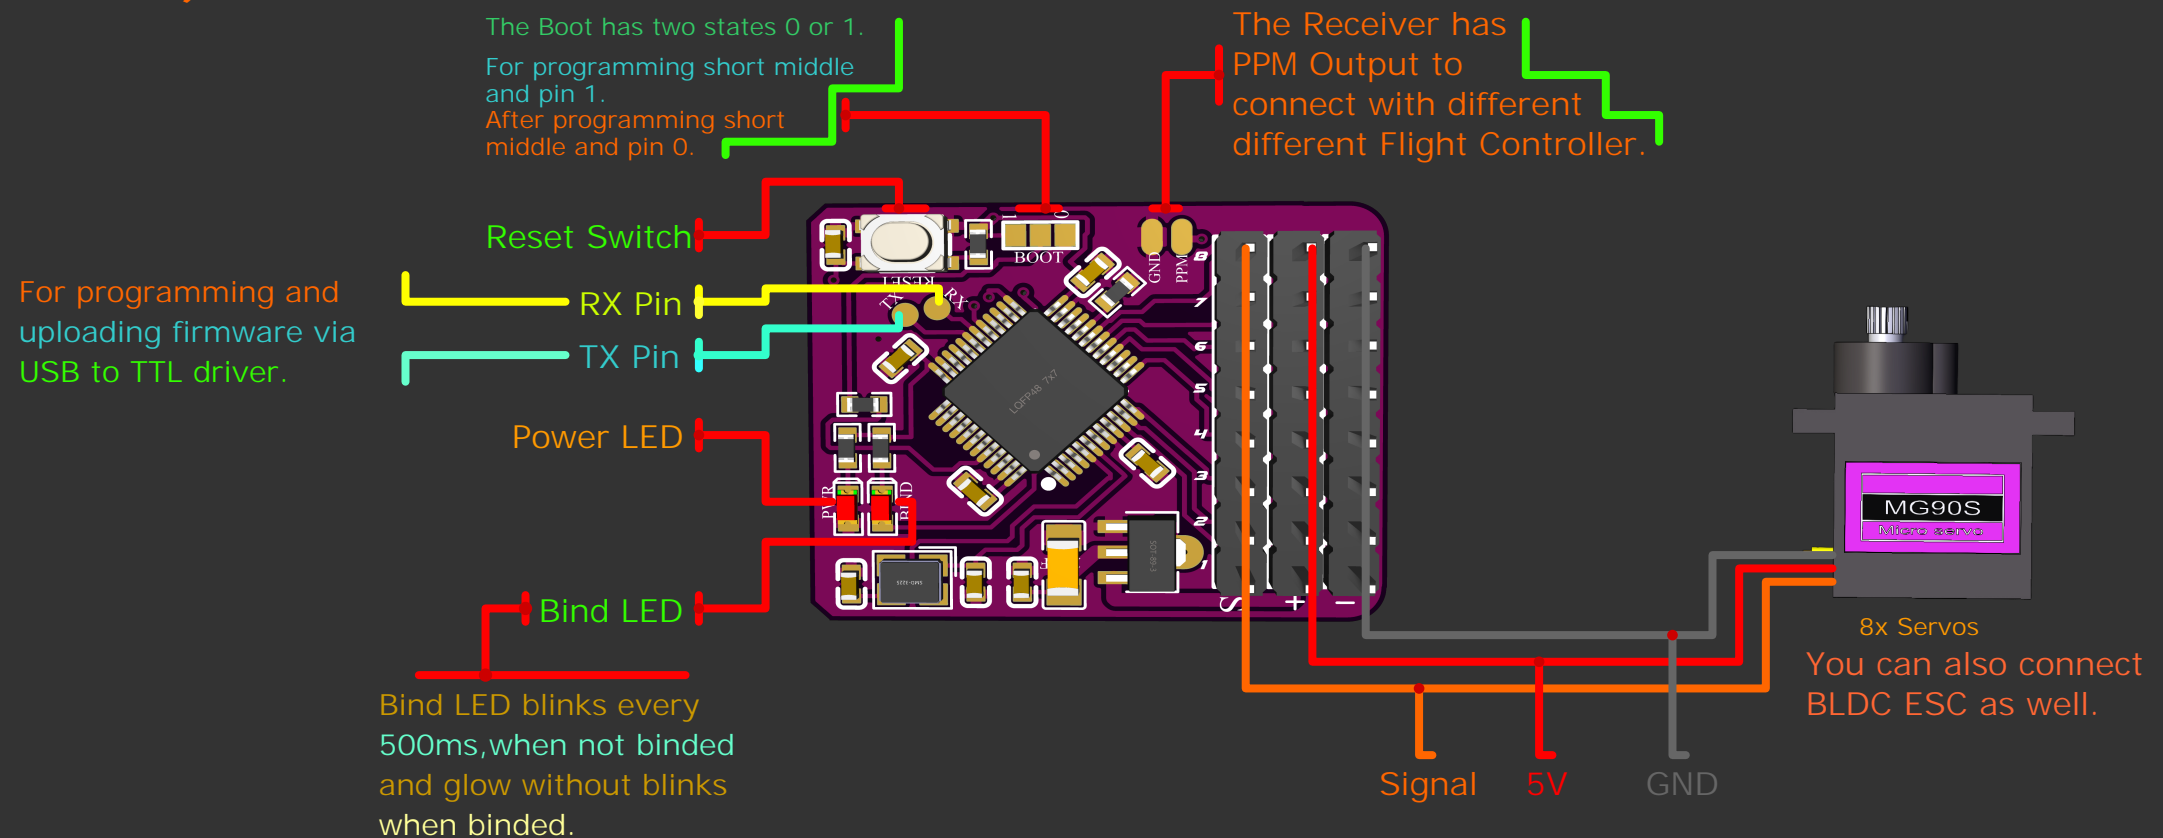

TITLE:	RECIEVR	REV: 1.0
Company:	DIY TECHOS	Sheet: 1/1
Date:	2024-10-11	Drawn By: BY MR.AHSAN

XRC Pro


Receiver

PPM & SBUS

Visual Connections

Schematic.

(MR.AHSAN)

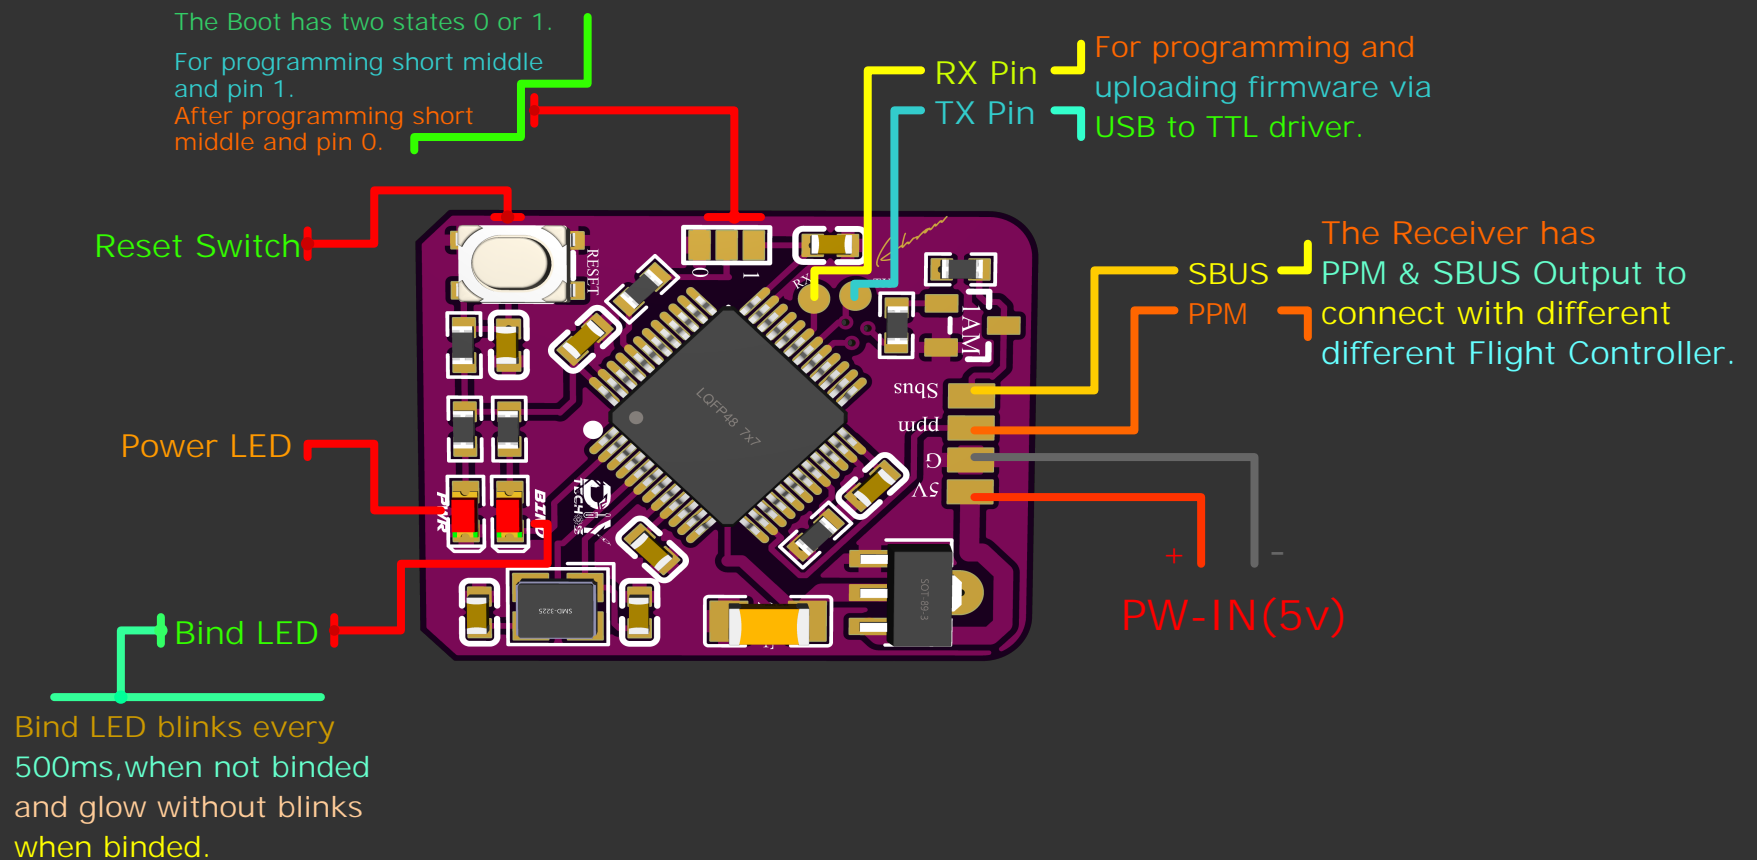

TITLE:	RECEIVER	REV:	1.0
	Company: DIY TECHOS		Sheet: 1/1
	Date: 2024-10-11	Drawn By:	BY MR.AHSAN