


## Cover for HVAC Compressor

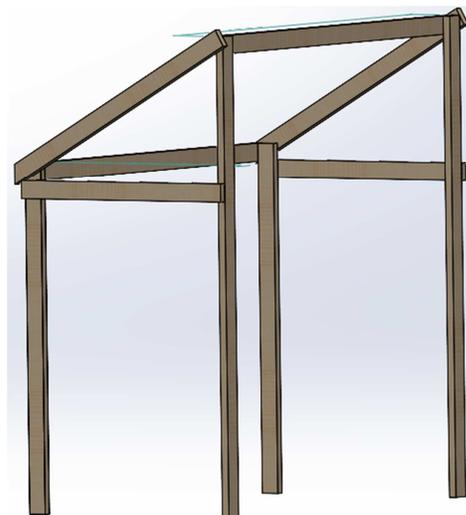

FRONT VIEW



BACK VIEW


### Materials:

- Back supports: (2 8') 2x4x92
- Front supports: (1 12' for both) 2x4x67
- Side rails: (2 8') 2x4x45
- Front and top cross supports: (2 12' to include slants) 2x4x84
- Slanted side supports: (2) 2x4x55

Summary: 2x4x8' (3), 2x4x12' (3)

Assembly:


- Build the two side support assemblies. All the boards essentially are laid with the 4" across up except for the back support that is turned with 2" across.

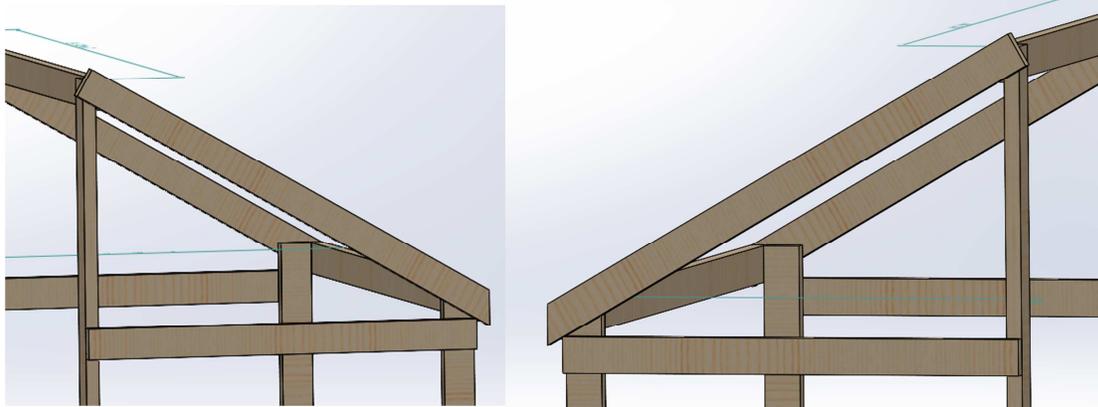

Left side

Right side

- The left and right sides are built opposite of each other.
- Assemble the two cross supports

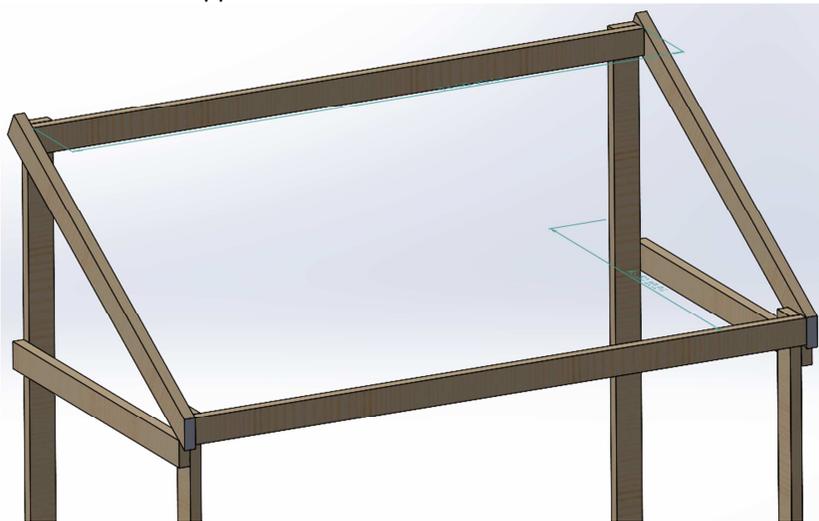

- Trim the diagonal supports to be flush so that sharp corners are not jutting out and that the back support can be placed flat against the wall.
- Add diagonal support if needed across the front and the back. These can be two to three feet long; longer provides more rigidity.
-