A.BUILD THE FRAME



Lay both vertical stud posts flat on the floor side by side. Measure half way up each stud post and mark a spot in the centre.



Place corner bracket over the marked spot and align with the bottom screw hole. Drill pilot holes then screw into the timber using 1 ¼' screws.



Turn both stud posts on their edge with the corner brackets facing each other.



BOOTS 'N ALL DIY SHOE STORAGE RACK



Position the horizontal stud post between the vertical posts and centre on corner brackets.



Mark the screw holes and drill pilot holes. Fasten the bracket to the studusing 1 $\frac{1}{4}$ screws.



On the other side of the 2x4 horizontal stud post, position the corner bracket. Do not align with the corner bracket on the other side.

B. POSITION SHOE RACK ONTO WALL




Decide the location of the shoe rack.

Position the base of the shoe rack close to the wall.





Place the upper and bottom caps onto the stud post.

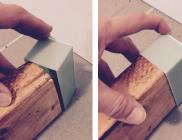

Bottom caps go on the base of the stud posts and upper caps the top



From the top end of the shoe rack, lift the frame up and let it rest against the wall.


Ensure the shoe rack is vertical by using a spirit level.



BOOTS 'N ALL DIY SHOE STORAGE RACK




Turn the adjusting screws clockwise to tighten.



TIP: For an online spirit level, download "Bubble Level" for free from the iphone App Store.

C. ATTACH THE HARDWARE

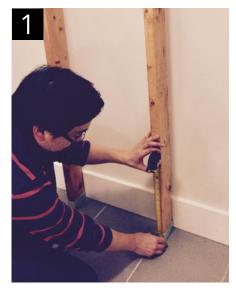

Measure 5"(12cm) from the bottom of the stud.

Place a mark in the centre of the stud post.



Align the mark with the bottom hole of the 48" shelf track.

TIP: Use masking tape to hold the shelf track in place while aligning the track



Mark each screw hole along the shelf track.

Drill pilot holes.

Use 1 ¼ flat head screws to fasten



BOOTS 'N ALL DIY SHOE STORAGE RACK



Align the 36" shelf track next to the first, centre it on the stud post.

Drill pilot holes

Use 1 ¼ flat head screws to fasten the shelf track to the stud post.

Tip:Use masking tape to hold the shelf track in place



Add pairs of shelf brackets onto the shelf track.

Use the handle of a hammer (or similar) to tap the top of the bracket to lock it in place.

Tip:Tap underneath the shelf bracket to release



Place on timber shelves