
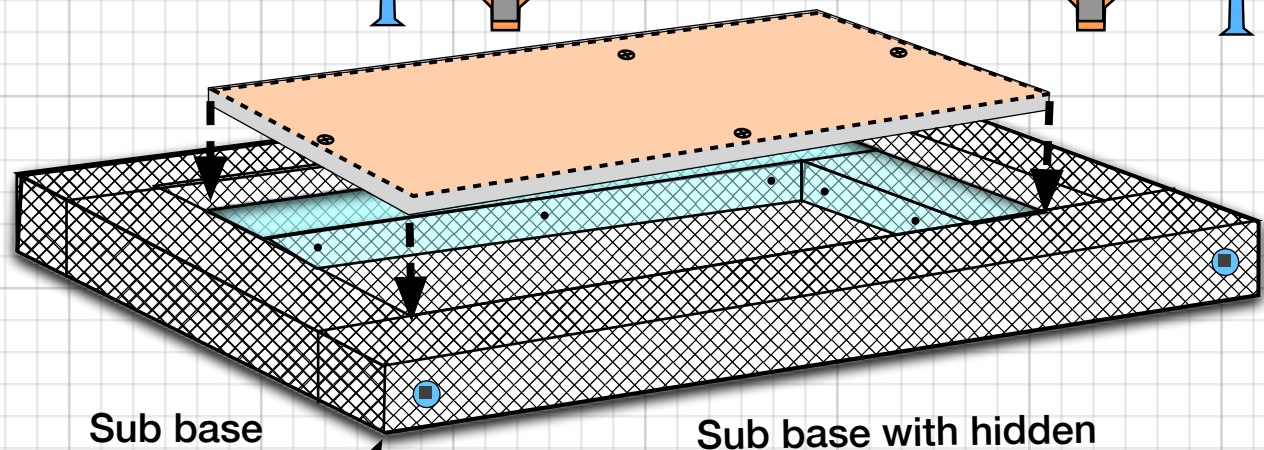
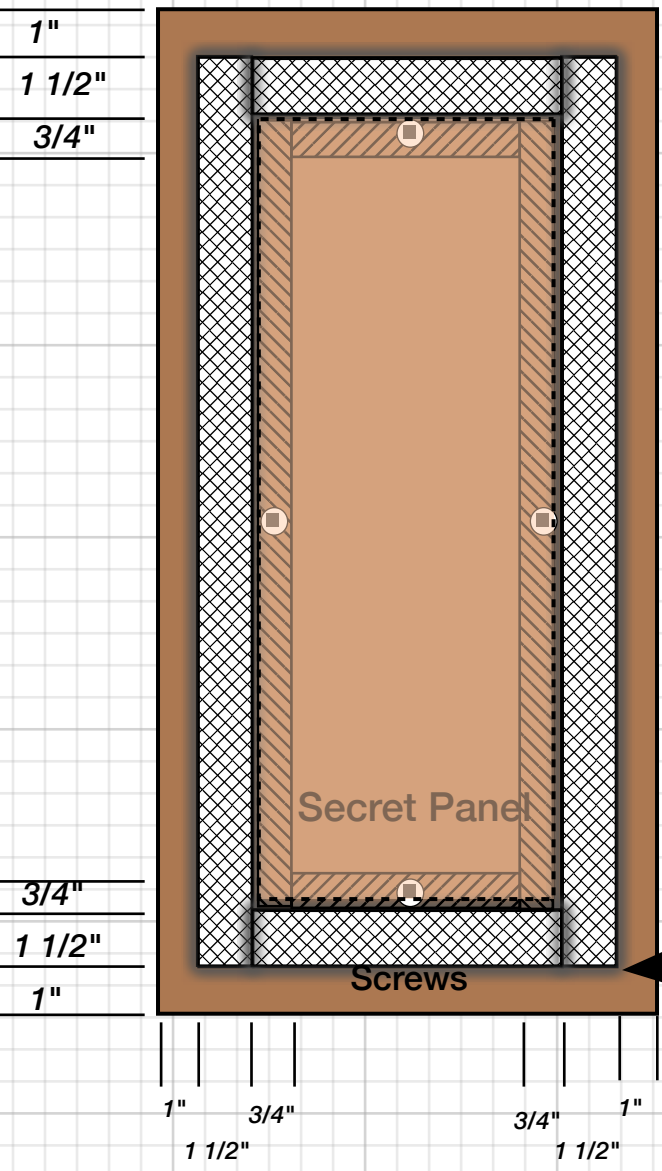


# Bottom View of Base plate: Not to scale

Assemble the 2x2 sub base from the 2x2's that you cut at the beginning. Place the 6" pc's. down and then place and align the 16" on opposite sides. Next, select a couple of clamps that will span across the shorter ends. Put these to the side for now. Select the 6" pc's. and glue the ends. place back between the 16" rails and clamp. Ensure they are flush and work on a flat surface. Screws are optional. (2"-2 1/2") Wipe away any glue with a clean wet cloth.

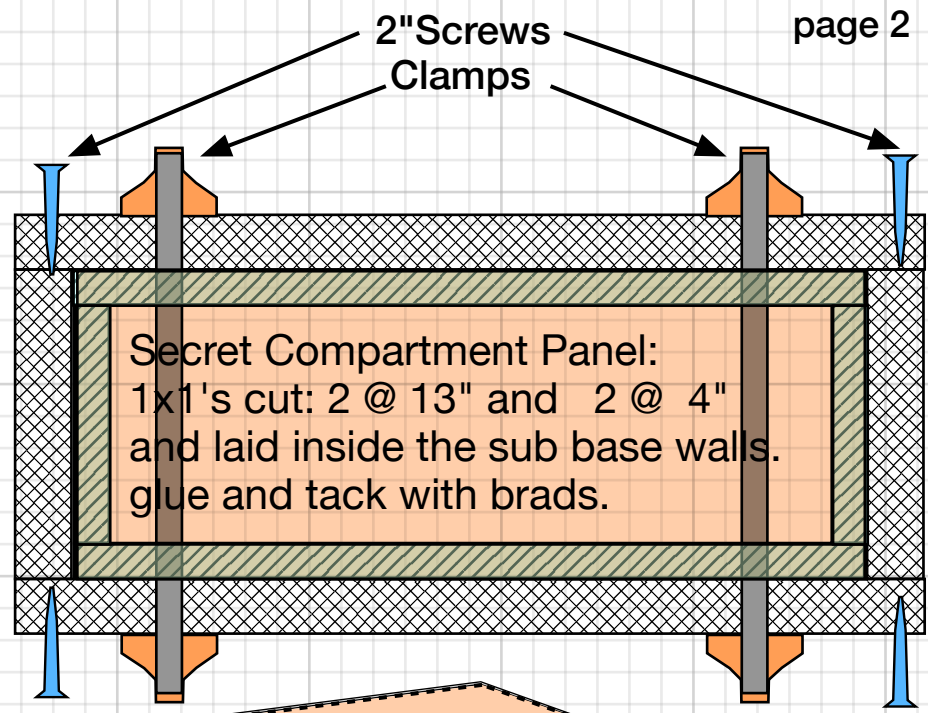

**Secret Compartment Panel:**  
 1x1's cut: 2 @ 13" and 2 @ 4"  
 and laid inside the sub base walls.  
 glue and tack with brads.

Sub base with hidden compartment  
 Outside 16" x 9" by 1 1/2"

**\*Secret Compartment Panel**  
 Dimensions: Inside:  
 12 3/4" x 5 3/4" by 3/4" (Max. thickness)  
 "I used 3/8" (the tighter the fit~the better)  
 Predrill 1/8" holes for 2-4 screws.  
 Use 1" screws.