



Super Structure


Front View

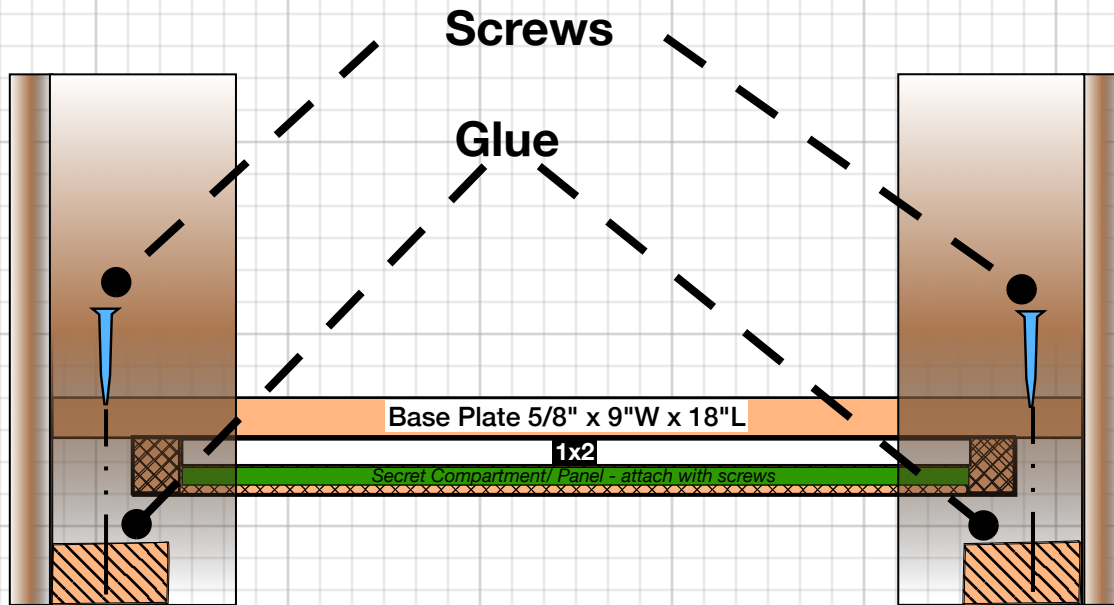

Side View

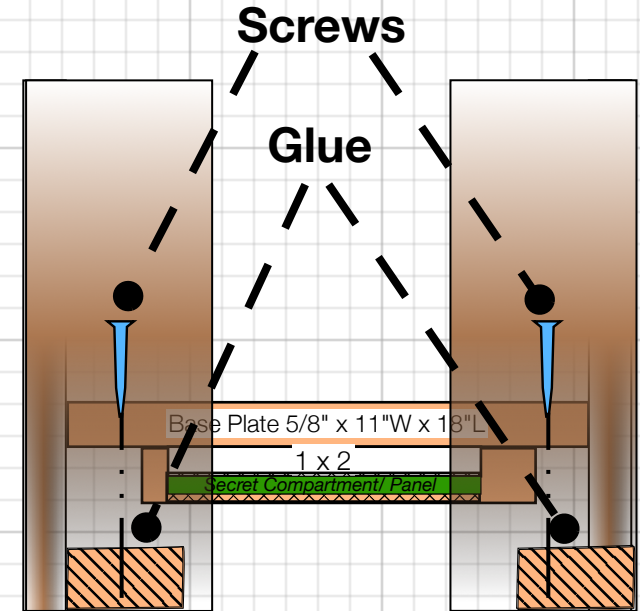

Bottom View of Box (underneath)

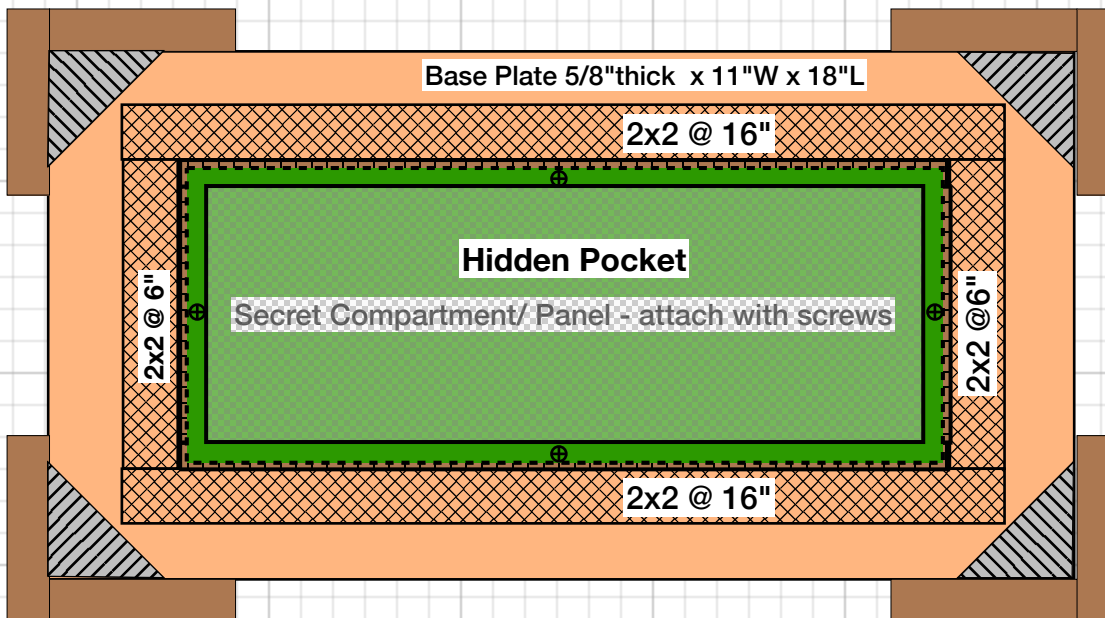

Orthographic View

- 1) Predrill 4 holes as shown below into the corners of the baseplate with a 'countersink' bit.
- 2) Apply glue directly to the cornerposts.
- 3) Carefully place the baseplate directly onto the cornerposts.
- 4) Pin with 1 3/16" brad nails thru all Cornerposts directly into the baseplate.
- 5) attach with screws (1 1/2")