
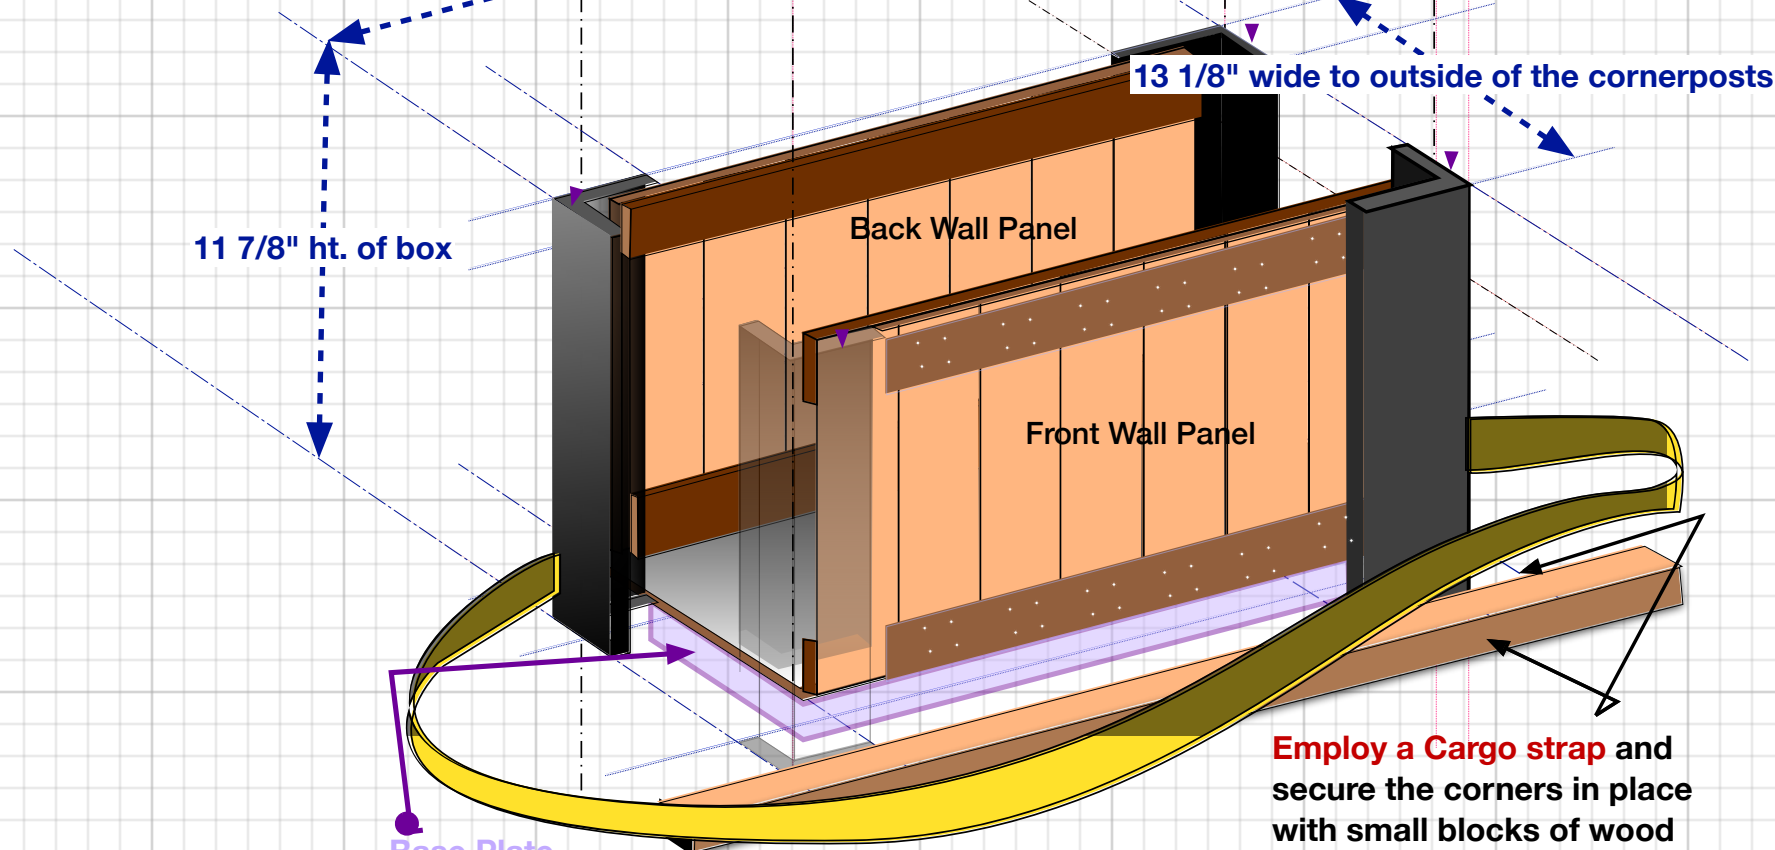
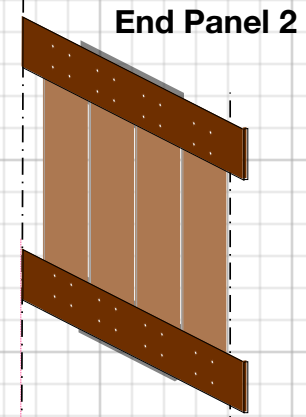


Orthographic 3

End Panel 1
Drop into place - glue and secure with clamps.
If You want, use the pinner with 1" brads and shoot from inside out into the Cornerpost.
(top middle & bottom / both sides.)
Repeat for the other side.

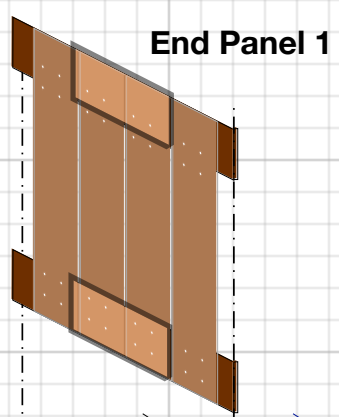

Base Plate
With Secret compartment and sub-frame attached to the bottom.

Employ a Cargo strap and secure the corners in place with small blocks of wood directly into the work surface while you attach the panels.