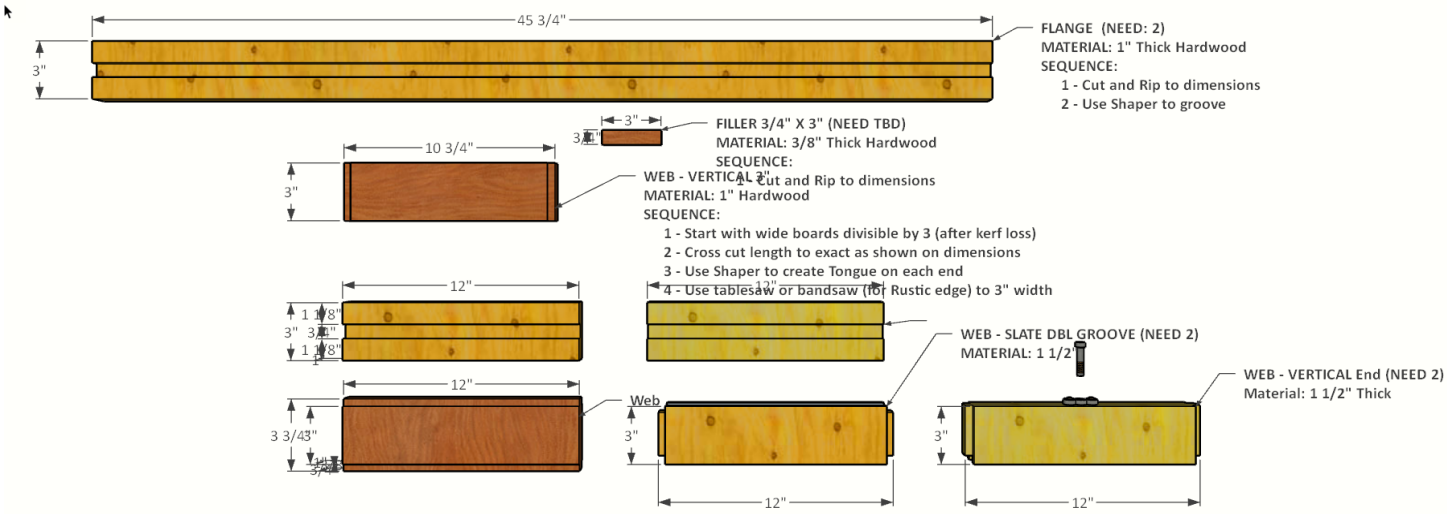
45 3/4"
3"
FLANGE (NEED: 2)
MATERIAL: 1" Thick Hardwood
SEQUENCE:
1 - Cut and Rip to dimensions
2 - Use Shaper to groove
3"
FILLER 3/4" X 3" (NEED TBD)
MATERIAL: 3/8" Thick Hardwood
SEQUENCE:
1 - Cut and Rip to dimensions
10 3/4"
3"
WEB - VERTICAL 2"
MATERIAL: 1" Hardwood
SEQUENCE:
1 - Start with wide boards divisible by 3 (after kerf loss)
2 - Cross cut length to exact as shown on dimensions
3 - Use Shaper to create Tongue on each end
4 - Use tablesaw or bandsaw (for Rustic edge) to 3" width
12"
12"
WEB - SLATE DBL GROOVE (NEED 2)
MATERIAL: 1 1/2"
12"
Web
3 3/4"
3"
12"
3"
12"
WEB - VERTICAL End (NEED 2)
Material: 1 1/2" Thick